 




- ② With each press of Button B while keeping Button C pressed, the engagement and disengagement of the alarm and the hourly time signal are made as follows:

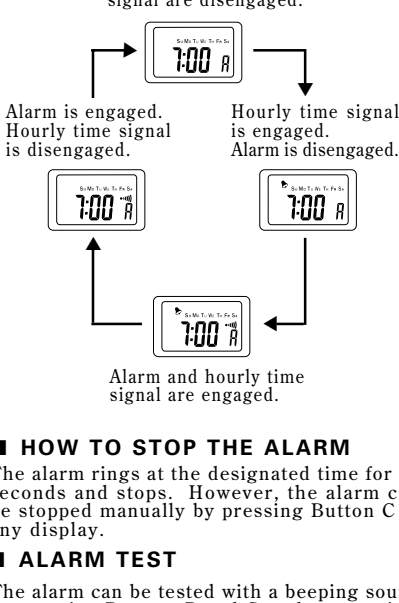

## ■ HOW TO STOP THE ALARM

 
The alarm rings at the designated time for 30 seconds and stops. However, the alarm can be stopped manually by pressing Button C in any display.

## ■ ALARM TEST

The alarm can be tested with a beeping sound by pressing Buttons B and C at the same time in the time/calendar display.


## ■ HOW TO SET THE TIME/CALENDAR

Time/calendar setting indicator

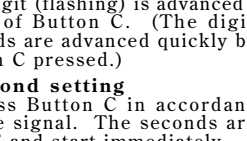

- ① Press Button A to activate the time/calendar setting function. (The time/calendar setting indicator and the second digits start flashing.)

 - ② Selection of the digits to be adjusted (flashing) is made in the following order by pressing Button B.



- ③ One digit (flashing) is advanced with each press of Button C. (The digits except seconds are advanced quickly by keeping Button C pressed.)

### • Second setting

Press Button C in accordance with a time signal. The seconds are reset to "00" and start immediately.

When the seconds count any number from "30" to "59" and Button C is pressed, one minute is added and the seconds are immediately reset to "00".

- ④ After all the adjustments are completed, press Button A to return to the time/calendar display.

**Note:** When setting the hour digits, be sure to check that the "A" (AM)/"P" (PM) mark is correctly set.

## ■ HOW TO CHANGE OVER THE 12-HOUR AND THE 24-HOUR INDICATIONS

 
In the calendar or the alarm display, each press of Button A changes over the time indication display from the 12-hour to the 24-hour and vice versa.

### • Changeover in the calendar display



[Keeping Button B pressed]

### • Changeover in the alarm display

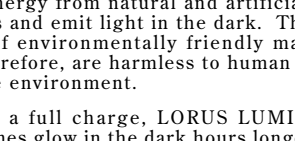


[Keeping Button C pressed]

\* When the "A" (AM)/"P" (PM) mark disappears, the calendar or the alarm display is shown in the 24-hour indication.

## ■ LUMIBRITE WATCH

 (dial, hands, buttons, case, bezel, strap, etc.)

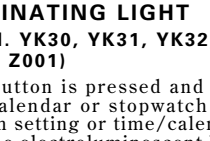

☆ If your watch is a LORUS LUMIBRITE watch, it has following features.

LORUS LUMIBRITE watches absorb and store light energy from natural and artificial light sources and emit light in the dark. They are made of environmentally friendly material, and therefore, are harmless to human beings and the environment.

- With a full charge, LORUS LUMIBRITE watches glow in the dark hours longer than conventional luminous watches of this type. If exposed to a light of more than 500 lux (i.e., the brightness of a typical office) for approximately 10 minutes, or direct sunlight for 2 minutes, they will glow for hours.


- Since LORUS LUMIBRITE watches emit the light they store, the brightness will decrease gradually over time. The length of time they will glow may also differ slightly depending on such factors as the brightness of and distance from the light source used to charge the watch.

## ■ ILLUMINATING LIGHT

 (for Cal. YK30, YK31, YK32, YK33, YK34 & Z001)

When EL button is pressed and released in the time/calendar or stopwatch display, or in the alarm setting or time/calendar setting function, the electroluminescent light evenly illuminates the display for 4 seconds for easy viewing in the dark.

EL button

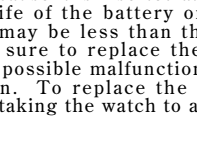

EL button (for Cal. YK32 & Z001 only)

### Notes:

1. The watch works with one battery. When the light begins to lose its luminance, this is an indication that the battery is depleted. We recommend that you change the battery before the watch itself stops.

2. If the light is used continuously for a long time, the battery life may be less than the specified period.

## ■ BATTERY CHANGE

 
The miniature battery which powers your watch should last as individually specified below. However, because it is inserted at the factory, the actual life of the battery once in your possession may be less than the specified period. Be sure to replace the battery to prevent any possible malfunction as soon as it runs down. To replace the battery, we recommend taking the watch to a local watch repair shop.

CAL. NO.	BATTERY	BATTERY LIFE (Approx.)
Y922 YK30 YK33 Z002	SONY CR2016, 1 piece	Cal. Y922: 10 years Cal. YK30: 2 years Cal. YK33: 2 years Cal. Z002: 5 years
YK31	SONY CR1220, 1 piece	2 years
YK32 YK34	SONY CR1620, 1 piece	2 years
Z001	SONY CR2032, 1 piece	8 years
Z003	SONY CR1020, 1 piece	4 years

**Note:** If the alarm is used for more than 30 seconds a day (and/or the illuminating light for more than 4 seconds a day for Cal. YK30, YK31, YK32, YK33, YK34 & Z001), the battery life may be less than the specified period.

## ■ CARE OF YOUR LORUS WATCH

### • BATTERY

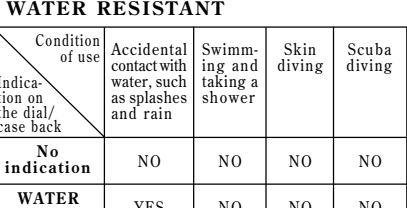

### • WATER RESISTANT

Condition of use / Indication on the dial/case back	Accidental contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
	No indication	NO	NO	NO
WATER RESISTANT	YES	NO	NO	NO
WATER RESISTANT (50 M/5 BAR)*	YES	YES	NO	NO
WATER RESISTANT (100 M/10 BAR or above)*	YES	YES	YES	NO

\* If your watch is 200 M/20 BAR, 100 M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.

- Do not operate the buttons when the watch is wet.

- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.

### Caution:

Leather straps are not water resistant except so indicated, even if the watch head is water resistant.

### • ALLERGIC REACTION

Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a physician.

### • MAGNETISM

Your watch will not be affected by magnetism generated by household electric appliances.

### • SHOCKS AND VIBRATIONS

Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

### • TEMPERATURE

Your watch is preadjusted so that constant accuracy may be insured at normal temperature.

## ■ SERVICE

When your LORUS watch requires repair or servicing, please see the enclosed WARRANTY/GUARANTEE.